

## PACKING LIST

- 1 x WorkForce WiFi Dongle
- 1 x Type-C adapter

### Notes:

- *Min. required WorkForce firmware version for WiFi Dongle connection: 65.145.4.12*
- *Available only as a [HWaaS](#) item*

## SAFETY INFORMATION


<https://www.wildix.com/safety-information/>

## WI-FI DONGLE CONNECTION

1. Connect WorkForce WiFi Dongle to Type-C adapter
2. Plug the Dongle into WorkForce USB Type-C port

### Notes:

- *Check that ACL rule "Can use" - "Advanced phone settings menu" is set in WMS -> Users -> Groups for users who need access to the feature*
- *WorkForce with a connected dongle requires at least 5V 2A power source*
- *Wi-Fi Bridge mode is not supported*

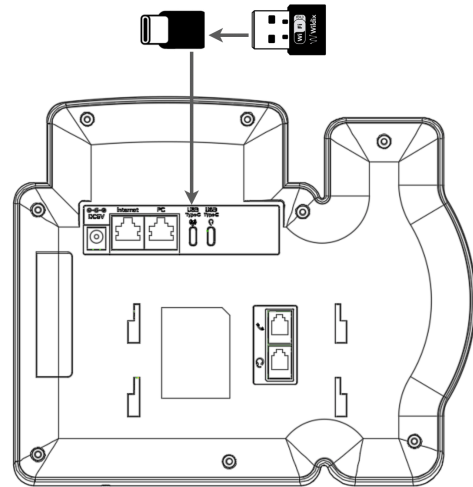

## NETWORK CONNECTION

To connect WorkForce to a Wi-Fi network:

1. Press **Menu** soft key on WorkForce
2. Go to **Network** menu and select **WLAN** option
3. Enable Wi-Fi connection: use **Navigation** keys or press **Switch** soft key to change Wi-Fi connection status from *Disable* to *Enable*; press **Save** soft key
4. Searching for Wi-Fi Networks is in progress. After it is completed, there is a list of all available networks
5. Select a Wi-Fi network from the list and press **Connect** soft key
6. Enter password and press **Save** soft key
7. WorkForce is now connected to the Wi-Fi network; the LED indicator blinks with fast short blue flashes during data transfer

Full guide online:



[www.wildix.com](http://www.wildix.com)