

---

If you need to replace the Server PBX in an existing WMS Network, proceed as follows:

1. Move all users from Client PBX (future Server)
2. Disable wms-network on this Client
3. Delete this Client from PBXs page on Server
4. Make a backup on Server
5. Apply this backup on Client